




Hitch Mounted Cargo Carrier

LED FITTING INSTRUCTIONS

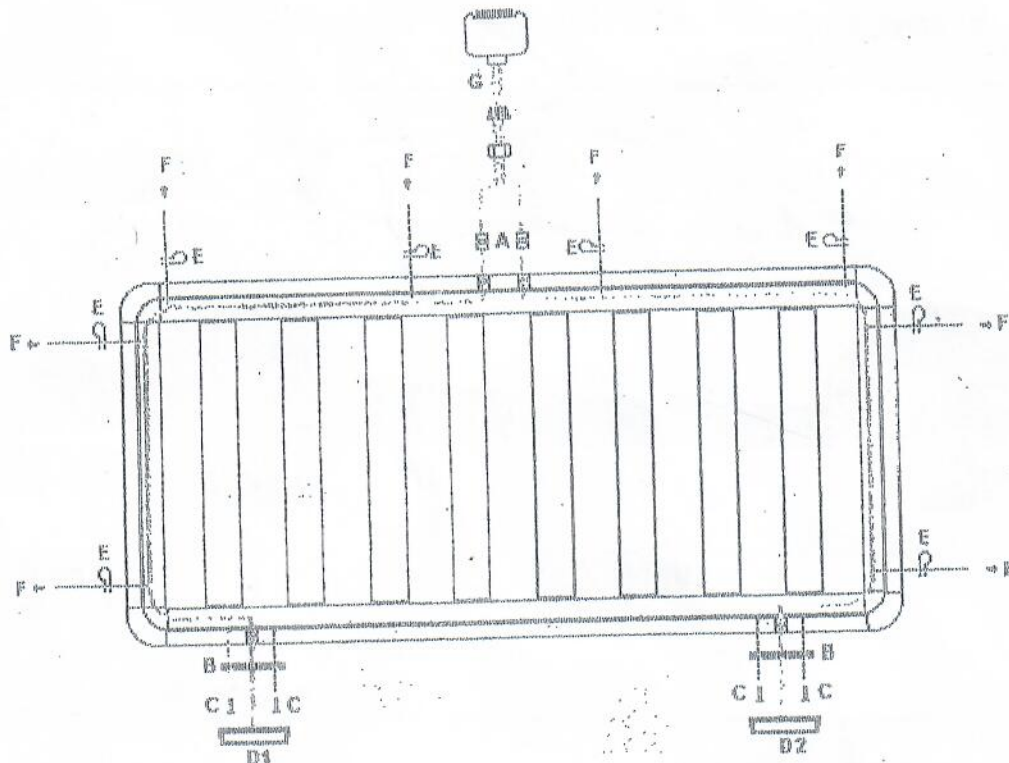

Parts-List:

A – Cable rubber grommet x 2

B – LED Lamp mounting plate x 2

C – LED Lamp mounting bolts and nuts x 4

D1 – LED Rear combination lamp LEFT side x 1

Cable colours – Yellow, Red, Brown and White

D2 – LED Rear combination lamp RIGHT side with built in licence plate lamp x 1

Cable colours – Green, Red, Brown and White

E – Cable "P" clips x 8

F – Hex head screws x 8

G – 7 pin flat trailer plug

Fitting Instructions

1. Fit cable rubber grommets (A) into rear of carrier
2. Attach LED lamp mounting plate base (B) to front of carrier using mounting bolts and nuts (C)
3. Feed LED Lamp (D1 & D2) cable through mounting plate base (B), continue to run them around the internal sides of the carrier and through the cable rubber grommets (A) at the rear of the carrier
4. Ensuring the Amber Indicator lamp is facing up (check sticker on rear of lamp) firmly click LED Lamps (D1 & D2) into mounting plate bases (B)
5. Using cable "P" clips (E) and hex head screws (F), secure cable to carrier
6. Connect 7 pin flat plug as per below instructions
 - a. Feed LED lamp cables through connectors end cap and twin rubber grommet
 - b. Strip cable sheath approximately 50mm exposing coloured cables
 - c. Place corresponding wires of first cable into numbered slots as per wiring instructions
 - d. Close the body of the connector and press firmly together
 - e. Repeat steps 6(c) & 6(d) for second cable then screw end cap on until tight